

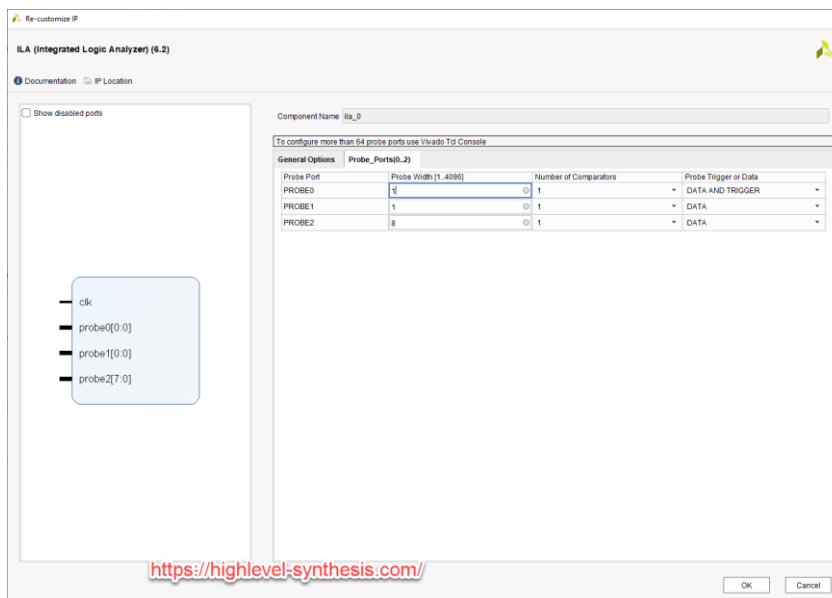


### 1- Add the ILA and customise that as follows

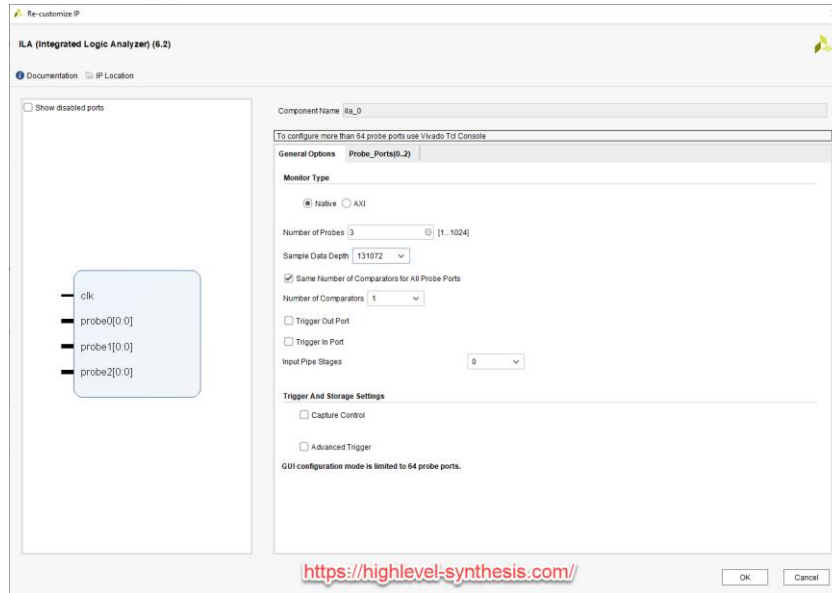

### 2- Connect the ILA IP to the design signals

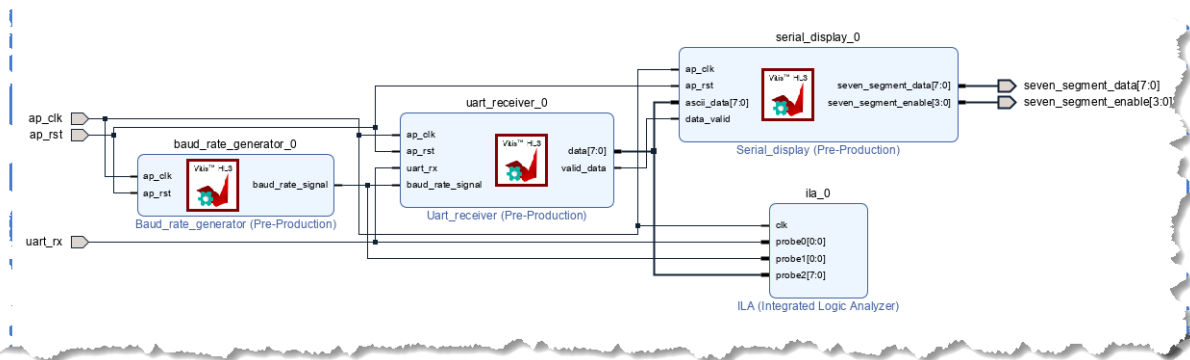

3- Finally, program the board and check the waveform diagram

